



MacBook Pro 13" Retina Display Late 2012 Headphone Jack Assembly Replacement

Prereq for removing the upper case.

Written By: Walter Galan



INTRODUCTION



Prereq for removing the upper case.

Step 1 — Headphone Jack Assembly



- Remove the two 3.4 mm T5 Torx screws securing the headphone jack to the upper case.

Step 2

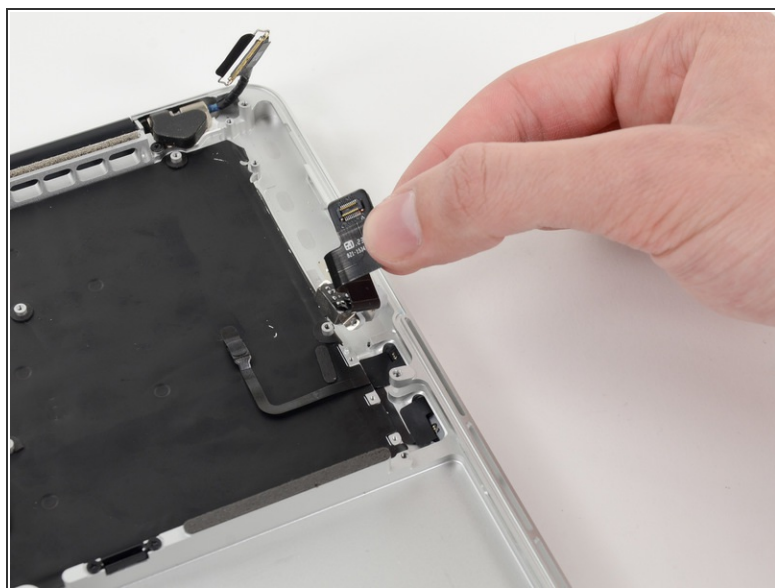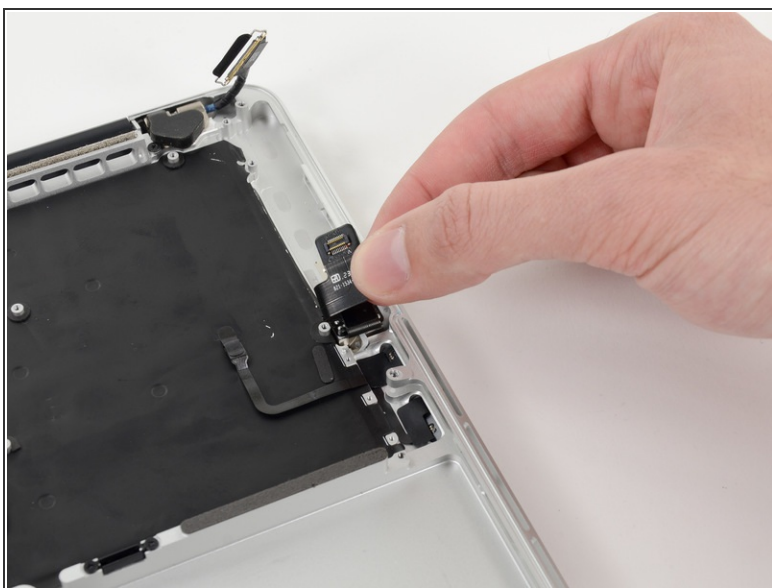

- Lift and remove the headphone jack out of the upper case.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-25 09:44:00 AM.

